



Thank you for purchasing our stainless steel tank we appreciate your business

Installation Instructions for the Tri Five Stainless Steel Tank

Tri Five Chevrolet tank install with OEM, Art Morrison and Roadster Shop chassis. The mounting brackets will require some trimming. The tank is designed to install centered in the chassis. Measure from the center of fill inlet, 13.50" from the rear cross member. Mounting brackets will install near the top of the frame. Please check that the tank does not rub against the trunk floor.

The back brackets point forward in the chassis and front brackets point side to side. The main objective is to line up the fill tube and install the tank as high as possible with out touching the trunk floor. Brackets can be welded or bolted to the frame. Use 3/8 x 3.5 bolt if bolting to the frame. DO NOT use self tapping screws on brackets.




Stock OEM Chassis




Art Morrison or Roadster Shop chassis



Use 3/8 x 3.5 bolt if bolting to the frame. DO NOT use self tapping screws on brackets

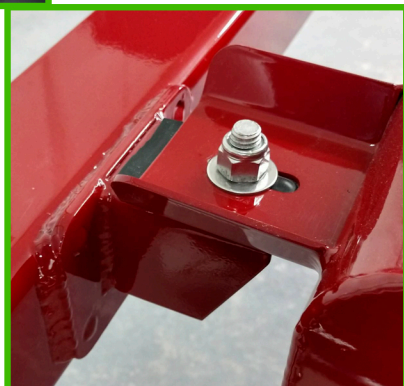

Brackets can be welded to the frame.

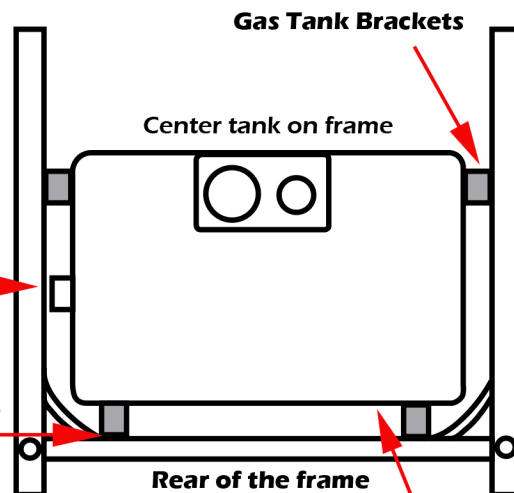

WARNING:

This product may expose you to chemicals which are known to the state of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.